
Russian Roulette Manual

K0 audit:(single machine)

Press the **K0** key to enter the account checking program. Press the start key to change the page number. The page number is displayed in the middle and the data is displayed in the upper right corner. (Online) Press and hold the host function key to turn on the machine, enter the function diagram, and then select "Accounting". After confirming, you can get the corresponding page number value.

0: Profit **1:** Total Coins + Total Points [Number of Coins] **2:** Total Coins + Total Points [Number of Coins] **3:** Total Profit

4: Empty **5:** Total play + market value **6:** Total play **7:** Number of coding **8:** Machine number **9:** Running light difficulty

Zeroing:

Trading desk: Press **K0+K1** to boot up, 8 zeros appear, enter 8-digit password in sequence from top 9 ---- 12, bottom 3 ----- 6 (password can be provided by the customer), and then press the start key, **66** appears (**22** means password error occurs).

Company table: Press **K0+K1** to boot, turn on the coder, and according to the calculation, first mark the profit point in the upper right corner (if it is negative, press the move key and then press the profit point, press the coder and press #, and then the bottom left 8 digits For the station number, press # on the coder, and the number of times of coding on the left below. Press # on the coder, and the 8-digit password will appear. Press the start key, and 8 0s will appear. ---- 6 Enter the 8-digit password in sequence, press the start key, **66** will appear (**22** password error appears). (Note: Do not reset to zero easily)!

Adjustment:

After resetting to zero, press and hold the [**K1**] key on the computer board to turn on the password.

0 pages; difficulty (800 is the hardest ----- 990 is the easiest)

Page 1; coin ratio: as refunded

1: 1	1: 2	1: 5	1: 10	1: 20	1: 50	1: 100
------	------	------	-------	-------	-------	--------

Page 2; maximum stake: select by refund: 99 80 50 25 10

Connection:

JP1(control)	
1	+12V
2	Coin signal
3	GND
4	ACC
5	Refund signal
6	GND
7	GND
8	Clean credit
9	GND
10	credit
11	GND
12	sound+

JP 2 (keyboard)		
1	GND (brown 0-7)	
2	GND (white 8-12, start, refund coin)	
3	0	8
4	1	9
5	2	10
6	3	11
7	4	12
8	5	double
9	6	red
10	black	start

JP 3 (keyboard)	
1	GND (black big, small, single, double, red, black)
2	big
3	small
4	single
5	
6	Refund coin
7	7

JP 4 (power)	
1	+12V
2	Refund signal
3	GND
4	GND
5	+ 5 V
6	+ 5 V

JP 5 (LED)	
1	GND (11)
2	10
3	11
4	12
5	small
6	Refund coin
7	start
8	big
9	double
10	single
11	black
12	red

JP 6 (LED)	
1	GND (10)
2	0
3	1
4	2
5	3
6	4
7	5
8	6
9	7
10	8
11	9